

Hello!

Thank you for purchasing
2-IN-1 PROJECTOR BARBIE!

Before you start to play, get set up on a table or on another flat, hard and clean surface and take everything out of the box. Carefully read the following instructions with an adult. You will then be ready to create beautiful drawings of Barbie and all her friends!

- 1 UNICORN PROJECTOR **A**
5 DRAWING SHEETS **B**
2 DISKS **C**
1 COMB **D**
1 BLACK MARKER **E**





CONTENT

BEFORE INSTALLING
THE BATTERIES,
MAKE SURE THAT THE
PROJECTOR IS IN THE
OFF POSITION.





THIS MUST BE DONE OUT BY AN ADULT.

- 1 Unscrew the protective cover under the toy.
- 2 Unscrew the battery compartment. Insert three new AA/LR6 batteries (1.5 V), preferably alkalines, making sure to observe polarity (+, -). **A**
- 3 Firmly re-tighten the compartment cover.
- 4 Insert the horn into the hole between the ears of the unicorn projector. **B**

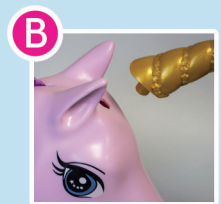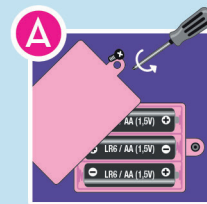

YOUR 2-IN-1 PROJECTOR IS NOW READY!

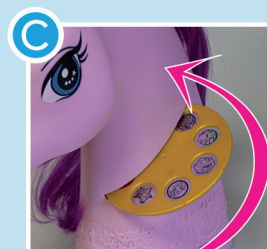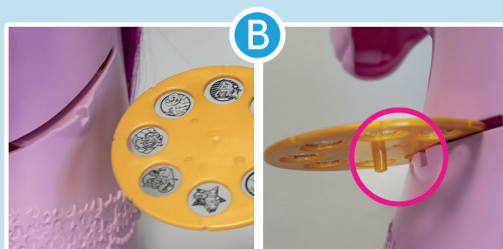INSTALLING
AND REPLACING BATTERIES

- 1 Place a sheet of white paper under the base of your projector.
- 2 Turn on the projector by turning the switch to "ON". **A**
- 3 Insert one of the two discs into the slot until it stops. Make sure that the disc is inserted on the right side: the spike must be downwards. **B**
- 4 You have 16 images to choose from! Choose the design you want to project by rotating the disc. **C**
- 5 Use the black marker to trace the image that appears on the paper.
- 6 When you have finished your drawing, turn your projector off by turning the switch to "OFF". **D**
- 7 Style your unicorn's hair with the included comb!

WOW, SHE'S SO PRETTY!

HOW TO USE YOUR
2-IN-1 PROJECTOR

Barbie

INSTRUCTIONS

RÉF : 20500

Lansay

BARBIE® and associated trademarks and trade dress are owned by, and used under license from, Mattel. ©2021 Mattel

112 quai de Bezons
95100 Argenteuil
FRANCE
www.lansay.fr
MADE IN CHINA

Warning!



Contains small parts.
Choking hazard.



Note: If you don't use this toy for a long period, we advise you to remove the batteries.

Warning! Do not discard this appliance with standard household waste. Please take this product to a collection point specific for electric and electronic appliances.

